

Programming a Smart Dual Copy remote control

What you need

Programming the Smart Dual Copy transmitter consists of 3 simple steps. Before we begin you will need your existing transmitter (key fob) as well as your new Copy transmitter.



Step 1

Push the top 2 buttons down on your Copy transmitter (and hold). You should see the led indicator on the transmitter start to flash. When the led indicator begins to flash more rapidly release the 2 buttons and proceed to step 2.

N.B. Ensure that you are holding both of the top buttons down and wait for 10 seconds. If The led indicator is not flashing rapidly ask for help.

Existing transmitter

Smart Dual Copy

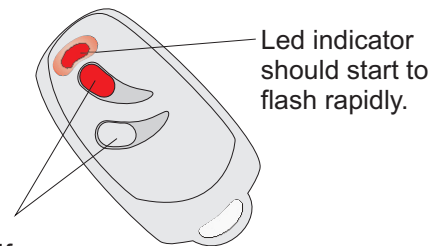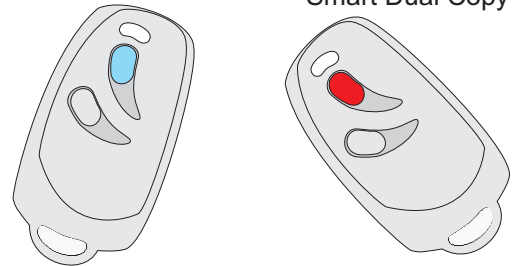


Hold down the top 2 buttons. If you are programming the 3 button version hold down top 2 buttons only.

Step 2

Press and release the button you would like to put into learn mode. You should see the led on the your Copy transmitter will light up and stay lit. You can now proceed to step 3.

N.B. Copy transmitters can learn a unique code on each button. Each button must be programmed individually.

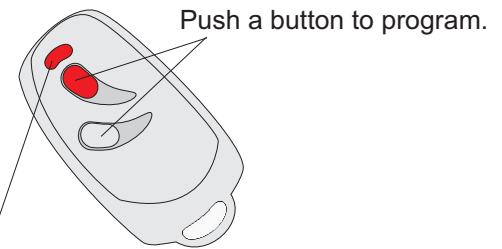

The Led should come on and stay on.

Step 3

Now that the led is lit up constantly on your Copy transmitter place it very close to your existing transmitter. Press and hold down the button that you would like your Copy transmitter to learn. If you are successful you should see the red led on the Copy transmitter blink twice.

N.B. If you where unsuccessful check that the batteries in your old transmitter have not run out. Make sure that your old transmitter is transmitting on 433.920 MHz.

