

The 230Vac Relay is permanently energized by the Mains Supply to the UPS unit.
When the Mains Supply is removed, the relay will change state and give a permanent 'start' input to the Gate 2 Control Panel.
On the Gate 2 control panel, put DIP Switch 3 – ON

