



 
Standard Release Key

The SEA FIELD Manual Release system is operated using the one of the special keys shown




For key operated release

Before attempting to operate the manual release:




- 1 Switch-off the power to the gates, even during a power cut.

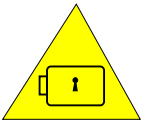


- 2 Release any additional locking devices i.e. an electric lock.

3

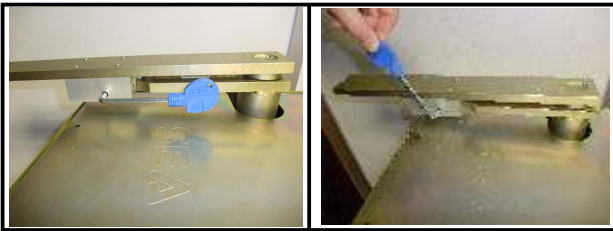

Insert the special key as specified turn the key anticlockwise through 90° and slowly push the gate

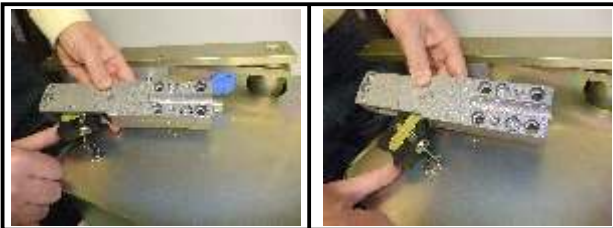

insert the special key as shown turn 90° and pull protruding lever and slowly push the gate

To re-connect the gates:-

Gently push the gates into to the closed position and carry out a reverse procedure to that described above.

It is recommended that the release device is regularly operated (at least once every 3 months) to check it is still functioning correctly.