 





Both the Mini Tank and the Mark Tank operators' emergency release devices are operated using the special key pictured to the left.

Before attempting to operate the manual release:



- 1 Switch-off the power to the gates, even during a power cut.

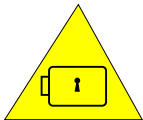

- 2 Release any additional locking devices i.e. an electric lock.



- 3 The Mini & Mark Tanks' brass emergency release valve is located on the centre-underside of the operator as indicated by the arrow in the photograph to the left.



- 4 To operate the release:
Put the key into the release valve. Holding the gate with one hand, turn the key anti-clockwise one half turn. The gate can now be slowly pushed open.
IMPORTANT: Half a turn open is sufficient to release the operator's internal hydraulic lock. Do not force the valve open more than half a turn or it may be damaged.

To re-connect the gates:-

Gently push the gates into to the closed position and carry out a reverse procedure to that described above. Do not over tighten the valve, the release valve only needs to be firmly tightened to function correctly.

Open and close the gates once using a remote control device to get the gates fully synchronized.

We recommend that the release device is regularly operated (at least once every 3 months) to ensure it is still functioning correctly.