 




The Saturn sliding gate operator's manual release is operated by unlocking and opening the hinged release lever using a key similar to the one shown in the photograph to the left.

## Before attempting to operate the manual release:

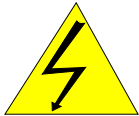

- 1 **Switch-off the power to the gate, even during a power cut.**




- 2 Flip off the grey plastic lock dust cover. Put the key into the lock barrel and turn clockwise a quarter of one turn (90°).




- 3 Pull the hinged release lever towards you until it stops at approximately 90°. The gate operator's drive mechanism is now released and the gate can be slowly pushed open manually.

## To re-connect the manual release:-

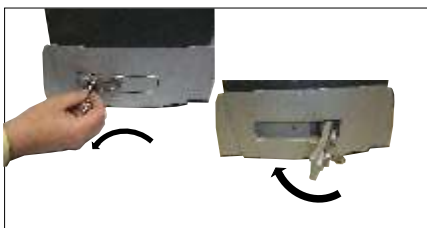

- 1 Push the hinged release lever back into the body of the operator and turn the key anti-clockwise a quarter of a turn (90°) to re-lock. Remove the key and replace the dust cover.

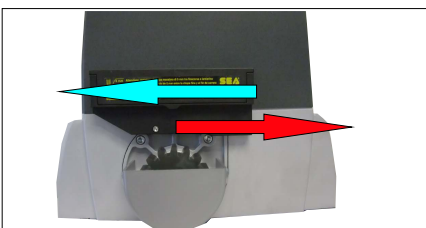

- 2 Slowly push the gate in either direction until the operator's drive gears re-engage.  
**IMPORTANT:**  
The gate must be pushed slowly - if the gate is pushed too fast it may damage the gears.

- 3 Turn the power back on and using a control device, signal the gate to 'fully open & close'. When the open and close cycle has been completed, the gate will be back in sequence and ready for normal use.