

Safety Warnings:

Before operating the Vela's manual release device:

- 1) Make sure the area is clear of people and obstructions
- 2) Whenever the barrier is placed into manual mode the beam must be supported to prevent accidental closure
- 3) Always re-lock the Vela's manual release immediately after the beam has been re-positioned and check that the beam is fully secured to prevent future accidents.
- 3) The Vela's cabinet door should only be opened by an experienced technician.




The SEA VELA BARRIER Manual Release system is operated using the special key shown to the left.



The photograph to the left of this text shows the location of the Vela's 'manual release device' on the cabinet.

Before attempting to operate the manual release:

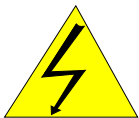

- 1 Switch-off the power to the barrier, even during a power cut.



- 2 Put the key into the release barrel and turn anticlockwise 180°. Manually move the beam into the required position and immediately relock the beam into position by turning the key clockwise until the release lock is firmly closed.

When the power is restored;

Operate the Vela using a control device to provide an 'open & close' signal. When the closing cycle has completed the Vela Barrier will be back in operating sequence.

It is recommended that the release is operated at least once every year to ensure it is still functioning correctly.