 
 


The Full Tank manual release is operated using a key similar to the one shown in the picture to the left.


Before attempting to operate the manual release:




- 1 Switch-off the power to the gates, even during a power cut.



- 2 Release any additional locking devices i.e. an electric lock.

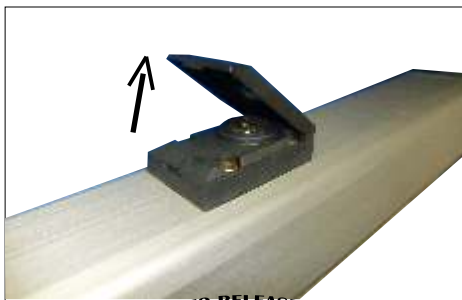

- 3 Lift the hinged cover on top of the release unit to reveal the emergency release lock barrel.

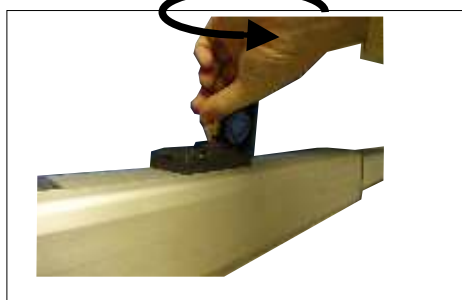

- 4 Put the release key into the release barrel. Hold the gate with one hand and turn the key anti-clockwise half of one turn (180°). The gate can now be slowly pushed open. **IMPORTANT:** Do not force the valve open more than 180°. Forcing the valve will damage it.

To re-connect the gates:-

Gently push the gates into to the closed position and carry out a reverse procedure to that described above. Do not over tighten the valve, the release valve only needs to be firmly tightened to function correctly.

Open and close the gates once using a remote control device to fully synchronize the gates .

We recommend that the release device is operated once a year to ensure it is functioning correctly.