 




The Lepus sliding gate operator's manual release handle is accessed by unlocking and opening a hinged lid using a key similar to the one shown in the photograph to the left.


Before attempting to disconnect the manual release:



- 1 **Switch-off the power to the gate, even during a power cut.**



- 2 Put the key into the lock barrel and turn anti-clockwise a quarter of one turn (90°). When the flap is opened it will reveal the release handle.

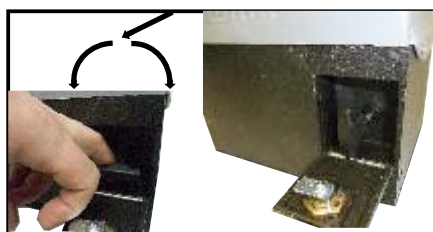

- 3 Using two fingers, grasp the release handle and in one movement, pull it towards you approximately 15mm and turn in either direction 90° then let go of the handle.
The gate operator's drive mechanism is now released and the gate can slowly be manually pushed open.

To re-connect the manual release:-



- 1 Gently turn the release handle in either direction until it springs back towards the operator.



- 2 Slowly push the gate in either direction until the operator's drive gears re-engage.
IMPORTANT:
The gate must be pushed slowly - if the gate is pushed too fast it may damage the gears.

- 3 Turn the power back on and using a control device, signal the gate to 'fully open & close'. When the open and close cycle has been completed, the gate will be back in sequence and ready for normal use.